


# INSTALLATIONGUIDE

AUDI / VW  
3.0 TFSI V6

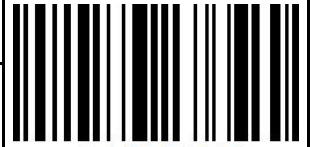

14109175


The product described in the guidance was developed, manufactured and controlled considering the necessary safety requirements.

The product must be installed properly to ensure a proper function and avoid danger for persons and things.

Please read this installationguide inclusive safety instructions carefully.

## Scope of supply:

Quantity	article
1x	Tuningbox
1x	Loom
1x	Bridge plug
1x	Fastening kit

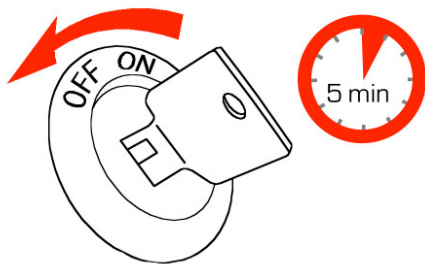

1. Open the hood.
2. Turn the ignition off!
3. Remove the ignitionkey!
4. Close and lock all doors!
5. Do not open any doors while installing the tuningkit!
6. Wait 5 minutes before beginning the installation




In order to avoid damages at electronic vehicle components, you have to be sure that you have done all necessary methods for **electrostatic discharge** .

Install the electronic in an **waterproof** and **vibrationless** place. Do not make any changes at the tuning-kit!

Do not expand or shorten the loom.


# INSTALLATIONGUIDE

AUDI / VW  
3.0 TFSI V6

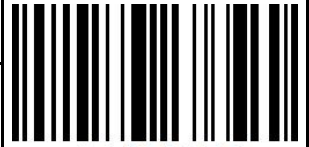

14109175

## Overview

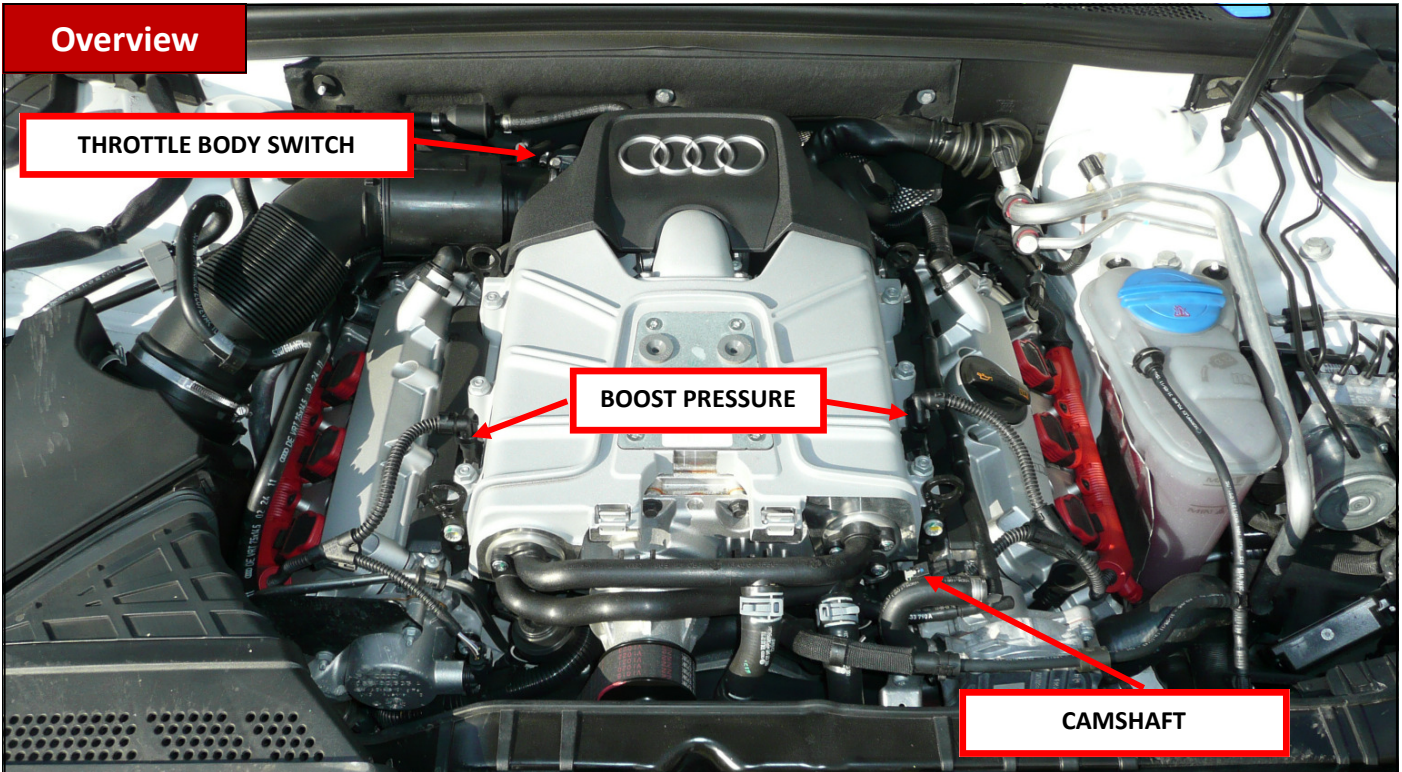

### Overview:

The tuningkit has to be attached to the following points:

- 2x boost pressure sensor
- Throttle body switch
- Camshaft

### Required tools:


- none

### Preperation:

- Move the individual strands of the loom to the associated plug connectors
- Put the required tools by your side ( if needed )
- Take the fastening material at your side
- ***To get the maximum power enhancement , you have to use „super plus“ (98 ROZ)***

# INSTALLATIONGUIDE

AUDI / VW  
3.0 TFSI V6

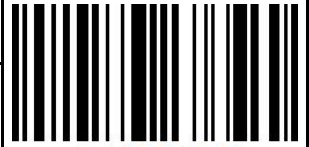

14109175


1



## 1. Preperation

- ◇ Before you can start installing the kit, you have to remove the engine cover.
- ◇ The engine cover is only clipped

2

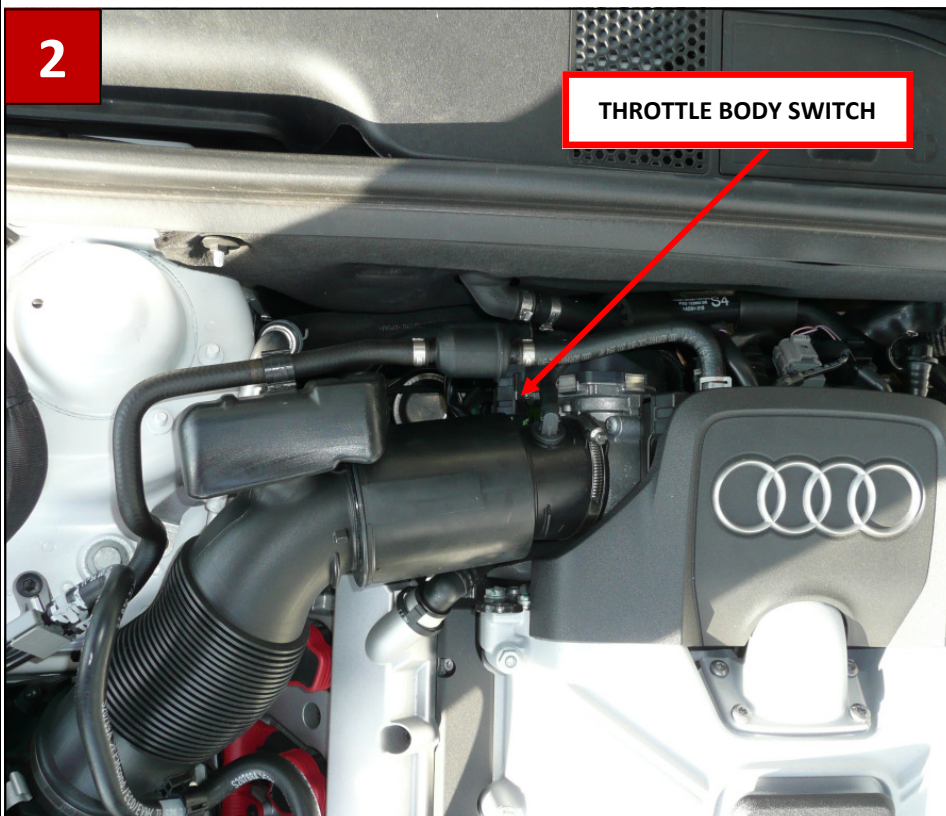


## 2. Throttle body switch

- ◇ Disconnect the plug from the throttle body switch
- ◇ Attach the throttle body switch plug to the new loom
- ◇ Connect the plug of the new loom the throttle body switch


# INSTALLATIONGUIDE

AUDI / VW  
3.0 TFSI V6

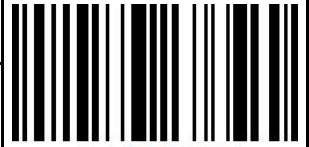

14109175


3

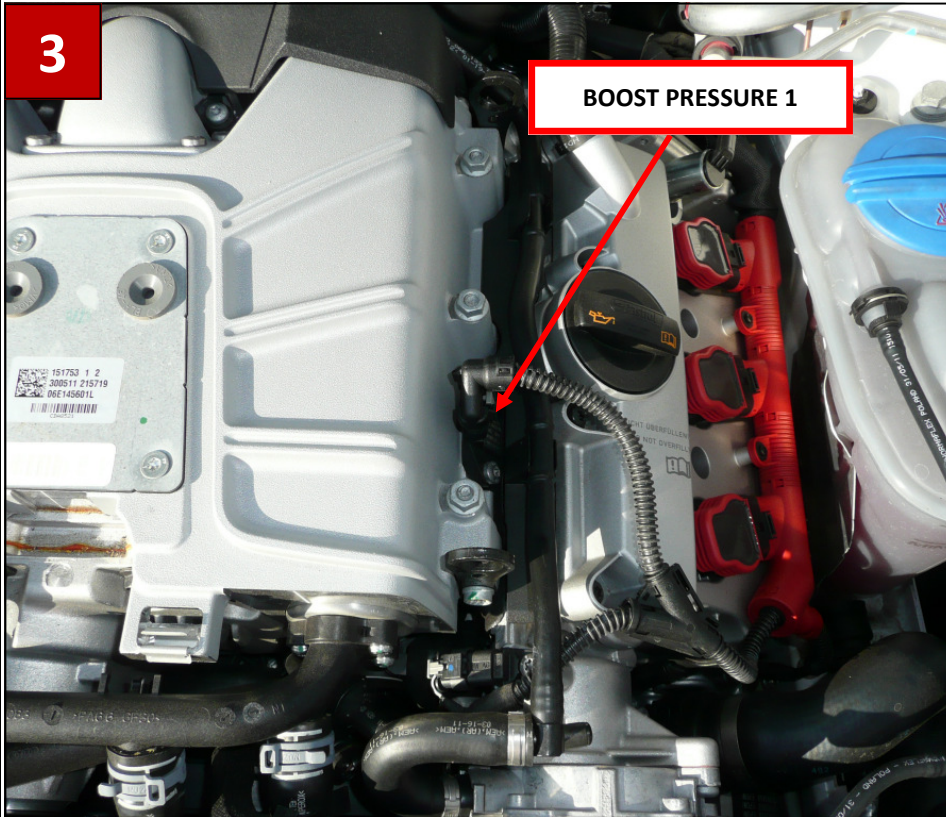

### 3. Boost pressure 1

- ◇ Disconnect the plug from the boost pressure sensor 1
- ◇ Attach the boost pressure plug to the new loom
- ◇ Connect the plug of the new loom the boost pressure sensor 1

4

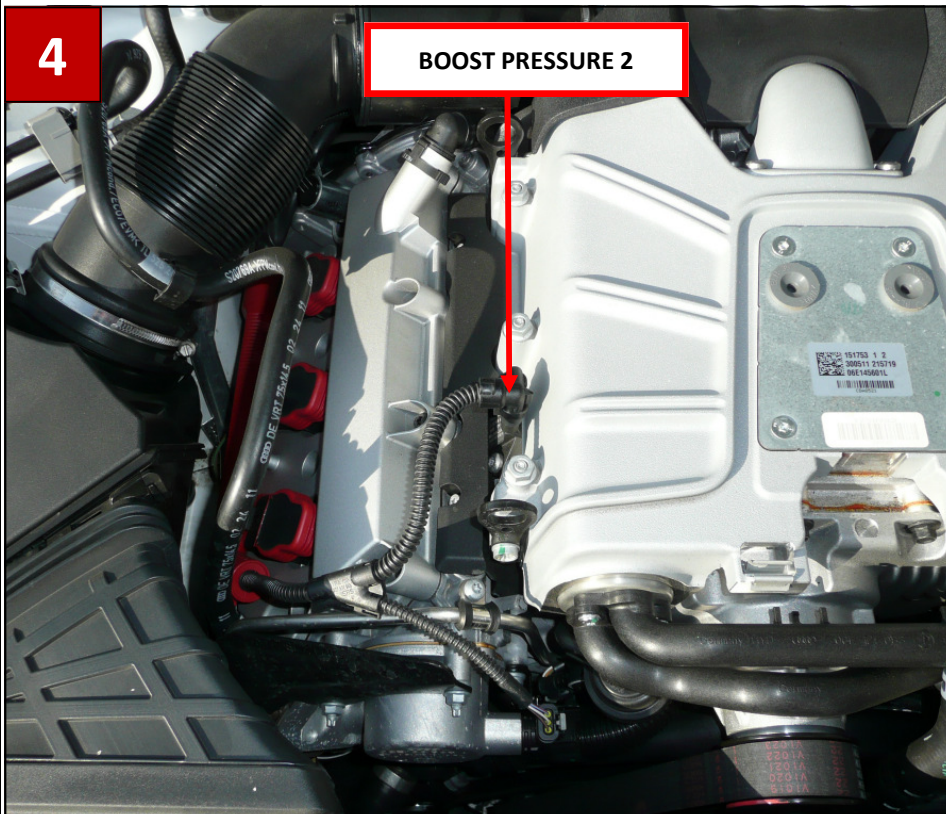


### 4. Boost pressure 2

- ◇ Disconnect the plug from the boost pressure sensor 2
- ◇ Attach the boost pressure plug to the new loom
- ◇ Connect the plug of the new loom the boost pressure sensor 2


# INSTALLATIONGUIDE

AUDI / VW  
3.0 TFSI V6

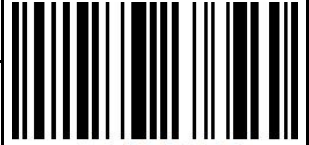

14109175


5

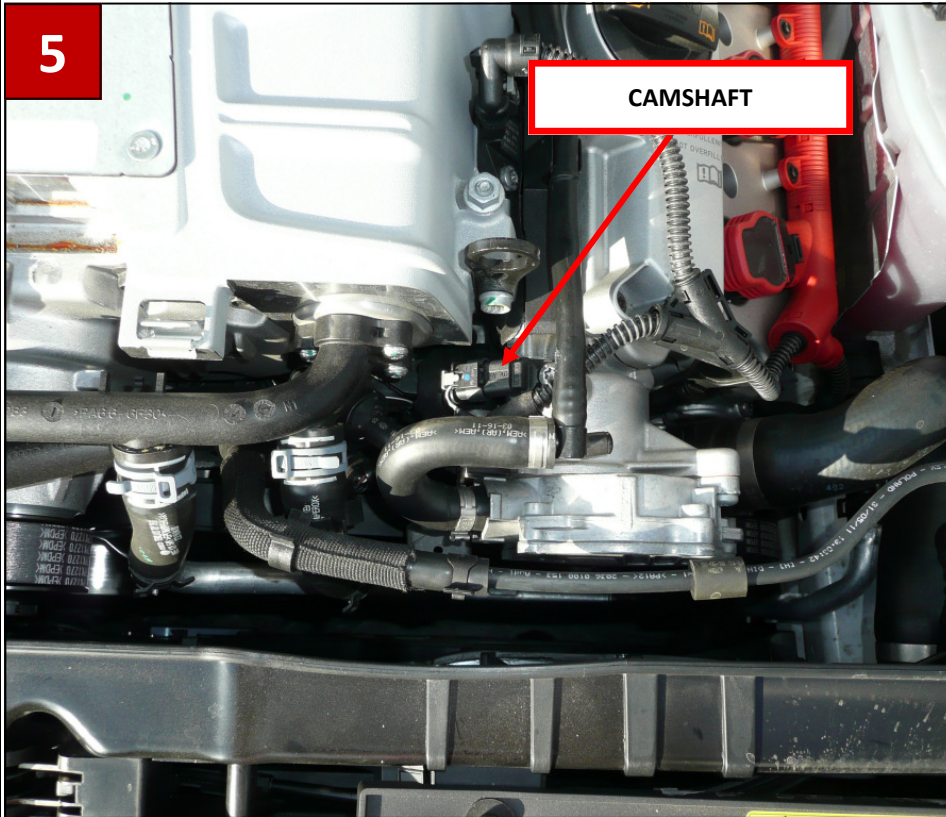

## 5. Camshaft

- ◇ Disconnect the plug from the cam shaft sensor
- ◇ Attach the camshaft plug to the new loom
- ◇ Connect the plug of the new loom the camshaft sensor

6

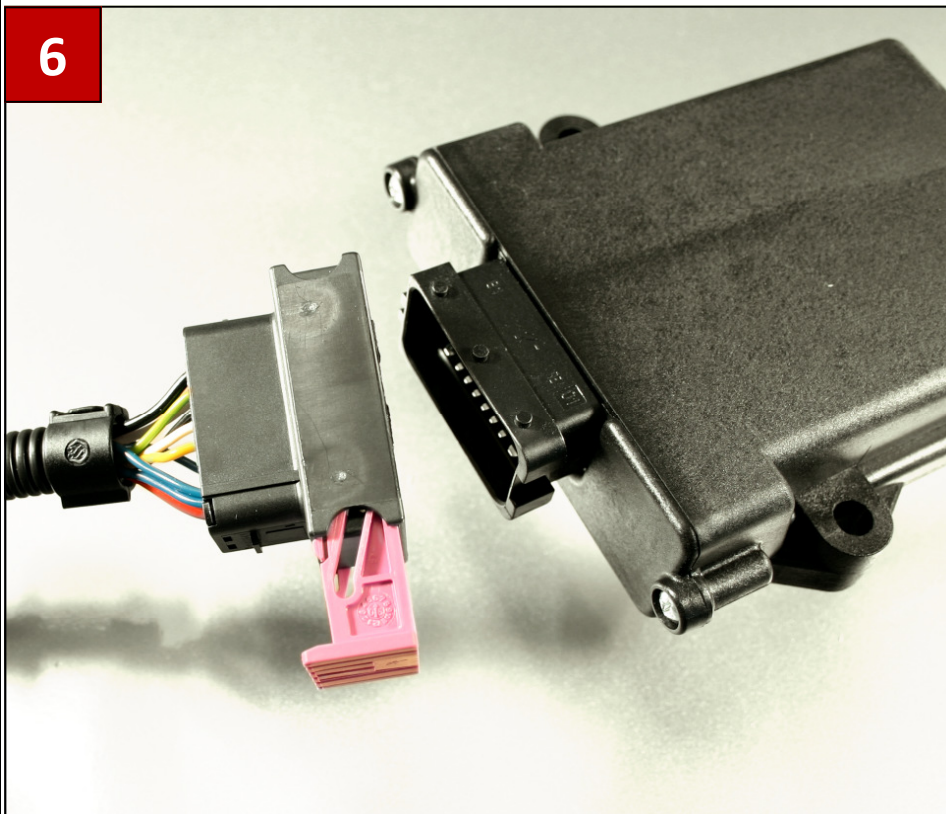

## 6. Tuningbox

- ◇ Finally install the cable towards a suitable position
- ◇ The plugs must be engaged, so that a safe connection is ensured
- ◇ Fix the cable with cable ties
- ◇ Connect the tuningbox to the new loom